


SEDIMENT BARRIER - HAY BALES

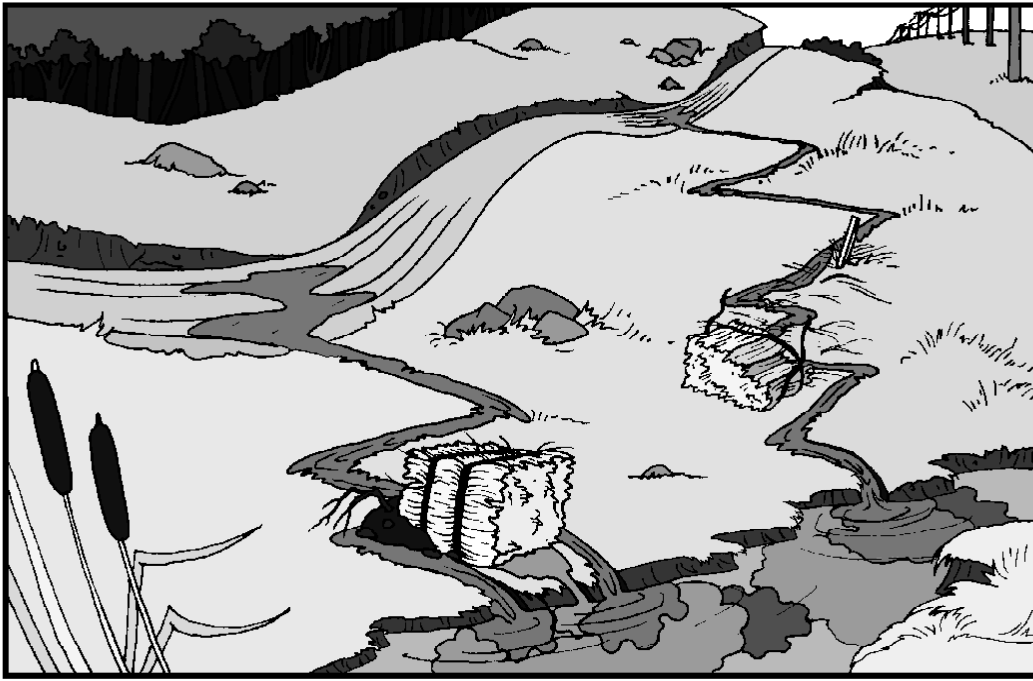

IMPROPER INSTALLATION

- Hay bales are not staked
- Not enough hay bales to adequately capture and slow flow
- Too far from source of runoff and sediment
- Improper orientation of bales: horizontal grass fibers do not provide adequate filtration
- Baling twine in contact with ground



PROPER INSTALLATION

- Staked properly; bales are secure and snug to one another
- Sufficient number of bales to slow flow and insure that no water escapes around edges
- Positioned close to disturbance, and far from resource to allow proper filtration
- Vertical orientation of grass fibers provides adequate filtration
- Baling twine does not contact ground